

3. REMOTE CONTROL PROGRAMMING

Please follow the procedure to enter in the programming mode:

- A. Insert the key in the Neiman
- B. Turn 5 times the key from the OFF position (stop) to the ACC position (Accessories). Each passage from OFF to ACC must be done in less than 3 s. At the last time, stay on ACC position (Accessories) for 3 s.
- C. The indicator lights will then light fixed during 2 s.: remote control programming.

Please refer to the table below to program a remote control:

N Number of the turn of key	Programmable function	After the N turns of key, the indicator lights flash:
		3 TIMES
5	Remote control programming	<ul style="list-style-type: none">1 • After the fifth turn of key (key on ACC) the indicator lights are fixed during 2 s.2 • Before 10 s. press the remote control you wish programme on the vehicle.3 • The indicator lights flash twice to valid this new remote control.4 • Do this operation again for the other remote control before 10 s.5 • After 10 s. (or key on OFF) exit from the programming mode, the indicator lights flash 3 times.

Best regards

The After-sale Department

AIXAM MEGA