

Feilkoder for Lombardini 492 (480)**ERROR CODE LDW492 DCI**

0088	Rail Pressure too High
0089	Rail Pressure control
0115	Engine water temperature sensor diagnosis
0190	Rail pressure sensor electrical failure
0201	Injector 1 open circuit diagnosis
0202	Injector 2 open circuit diagnosis
0216	Injector/injection timing control circuit
0220	Accelerator 1 potentiometer sensor diagnosis
0221	Accelerator 2 potentiometer sensor diagnosis
0230	Fuel pump command diagnosis
02EE	Injector 1/2 short circuit diagnosis
0335	Engine speed sensor diagnosis
0381	Glow plug lamp diagnosis
0480	Fan1 relay command diagnosis
0500	Vehicle speed sensor diagnosis
0504	Brake switch consistency test
0520	Oil switch sensor diagnosis
0522	Engine Oil pressure sensor/switch low
0560	Battery voltage diagnosis
0561	Voltage regulator diagnosis
0562	Main relay sensing diagnosis
0563	Main relay diagnosis
0601	Checksum E2PROM diagnosis
0604	Ram diagnosis
0605	Rom diagnosis
0606	CPU diagnosis
0612	Load disable for safety diagnosis
0621	Alternator command (HSD) diagnosis
0623	Alternator lamp diagnosis
0641	Sensor supply 1 diagnosis
0645	A/C Relay command diagnosis
0650	Warning lamp diagnosis
0651	Sensor supply 2 diagnosis
0654	Engine speed repetition for dashboard
0655	Engine water over temperature lamp command diagnosis
0683	Glow-plug relay command diagnosis
0685	Powertrain main relay command diagnosis
0778	Rail pressure regulator diagnosis
0812	Reverse gear switch input circuit
0850	Neutral switch input circuit
1222	Accelerator sensors consistency test
1602	A/D converter diagnosis
1610	Safety 3 diagnosis
1612	Safety 2 diagnosis
2146	Voltage capacitor launch injectors (VBoost)
2226	Atmospheric pressure sensor diagnosis
2264	Water in fuel sensor presence diagnosis